

## **E8/... SERIES**

**SOLENOID GAS VALVES WITH 1/8" and  
1/4" CONNECTIONS AND OPERATING  
PRESSURE UP TO**

### FLOW ADJUSTMENT FOR E8/SR...


After removing the top protection, rotate clockwise the screw marked with 1 in Fig.1 to reduce the flow, rotate it counterclockwise to increase the same.



Fig.1

### OVERALL DIMENSIONS t

|

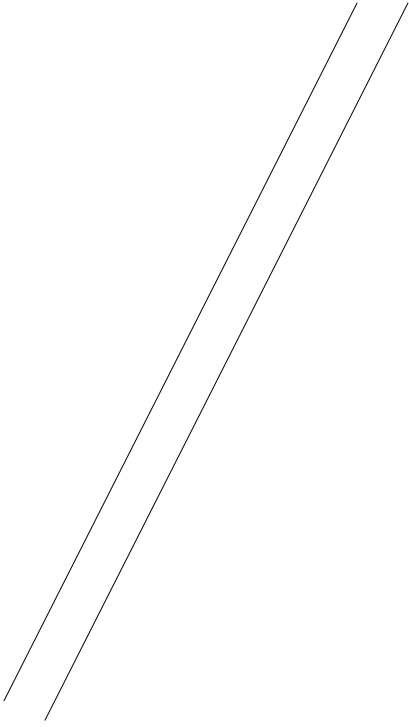

## TYPE REFERENCES