






1.2 Ordering Information

EDM 7700	D	E	1	FG	НІ	1	U	٧	W	z
EPM-7790 (72x72 DIN Size)	0		1	00	00		1		o	0

Power Supply

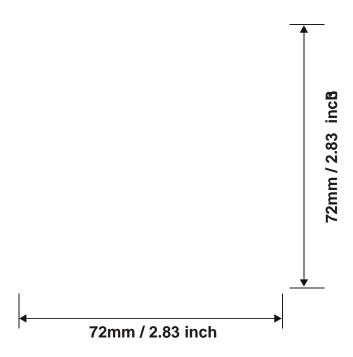






3.3 View of the Device Label		

3.4 Supply Voltage Input Connection of the Device

Connection of Supply Voltage Input

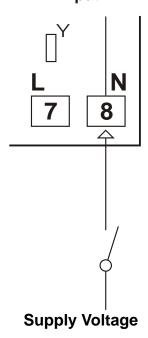

Note-2: "L" is (+), "N" is (-) for 24V Z Supply Voltage

Displays Set Value and Parameters

Led Indication of Forward Direction

l If-**% ₹49**.61**69**9 RR5282(I60630T9(I)Tj4.573210 Prora 2tn

It is used to increase the value and access to the parameter in programming mode

Decrement Button

It is used to enter to the SET value changing mode, programming mode and used as OK button

Note-1: If increment or decrement button is pressed for 2 seconds continuously, increment and decrement number become 10, if pressed for 4 seconds continuously, increment and decrement number become 100, if pressed for 6 seconds continuously, increment and decrement number become 1000.

Operation Screen		SET Value Screen
∜f Set value is chang	ged while the motor is running, ar	nalogue output is affected



4.4 Easy Access Diagram Of Programming Mode Parameters

•

Р

*

*



Operation Screen

Programming Section Accessing Screen

O • •

Press increment
button for
accessing to the
password
entering screen

Password Entering
Screen




Scale High Limit Parameter



Set High Limit Parameter

•


Р








Direction Change Delay Time Parameter






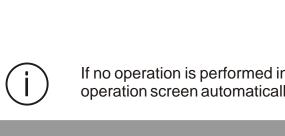







6. Specifications

Device Type